



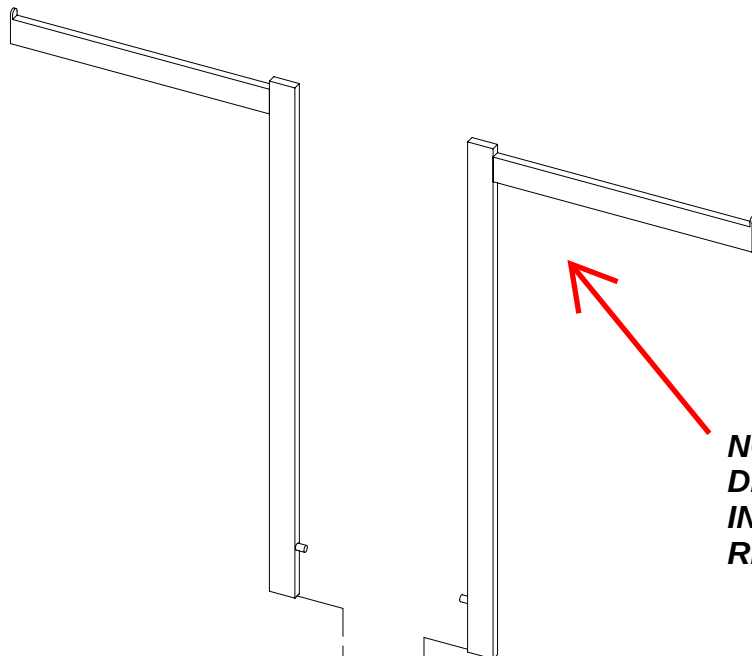

**NOTE: ARMS WILL VARY
DEPANDING ON ITEM.
INSTALLATION PROCEDURE
REMAINS THE SAME**

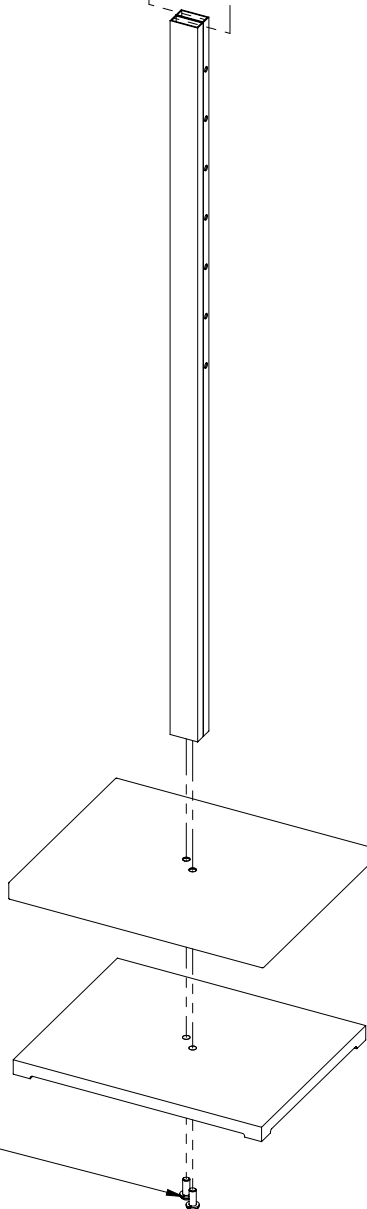

**3/8"-16 X 2"LONG
SOCKET BUTTON
HEAD SCREWS
3/8" LOCK WASHERS
2 REQUIRED**

Assembly Instructions

