


3/8" STANDARD WASHER

3/8" LOCK WASHER

3/8"-16 x 2"LONG  
SOCKET HEX HEAD BOLT  
1 REQUIRED

Assembly instructions for  
K29

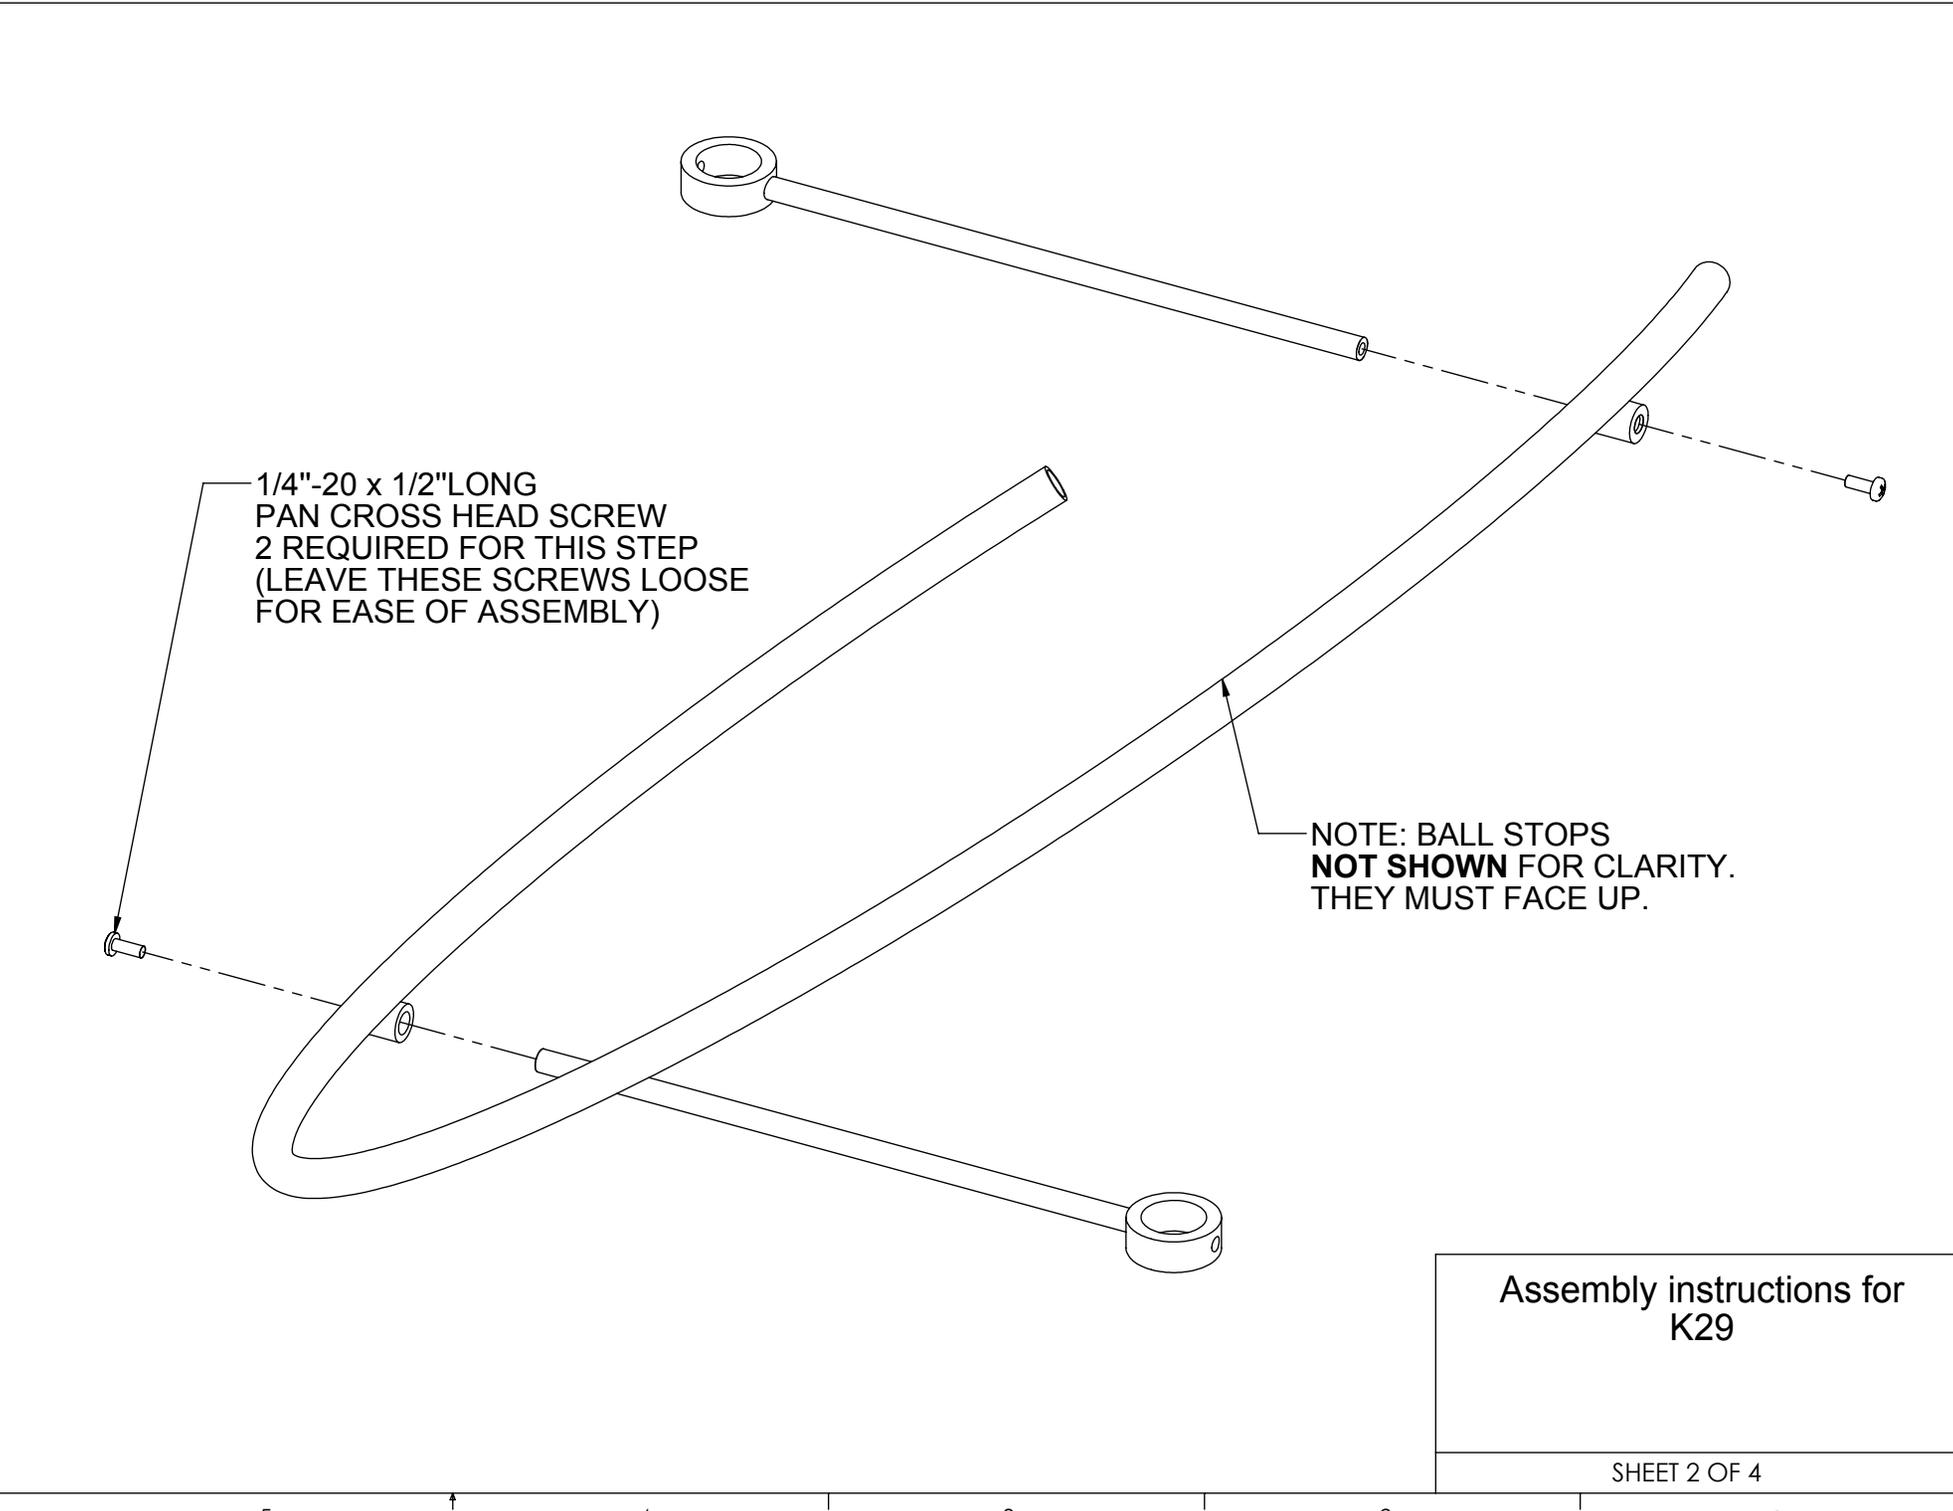


1/4"-20 x 1/2" LONG  
PAN CROSS HEAD SCREW  
2 REQUIRED FOR THIS STEP  
(LEAVE THESE SCREWS LOOSE  
FOR EASE OF ASSEMBLY)

NOTE: BALL STOPS  
**NOT SHOWN** FOR CLARITY.  
THEY MUST FACE UP.

Assembly instructions for  
K29


SHEET 2 OF 4

5 4 3 2 1

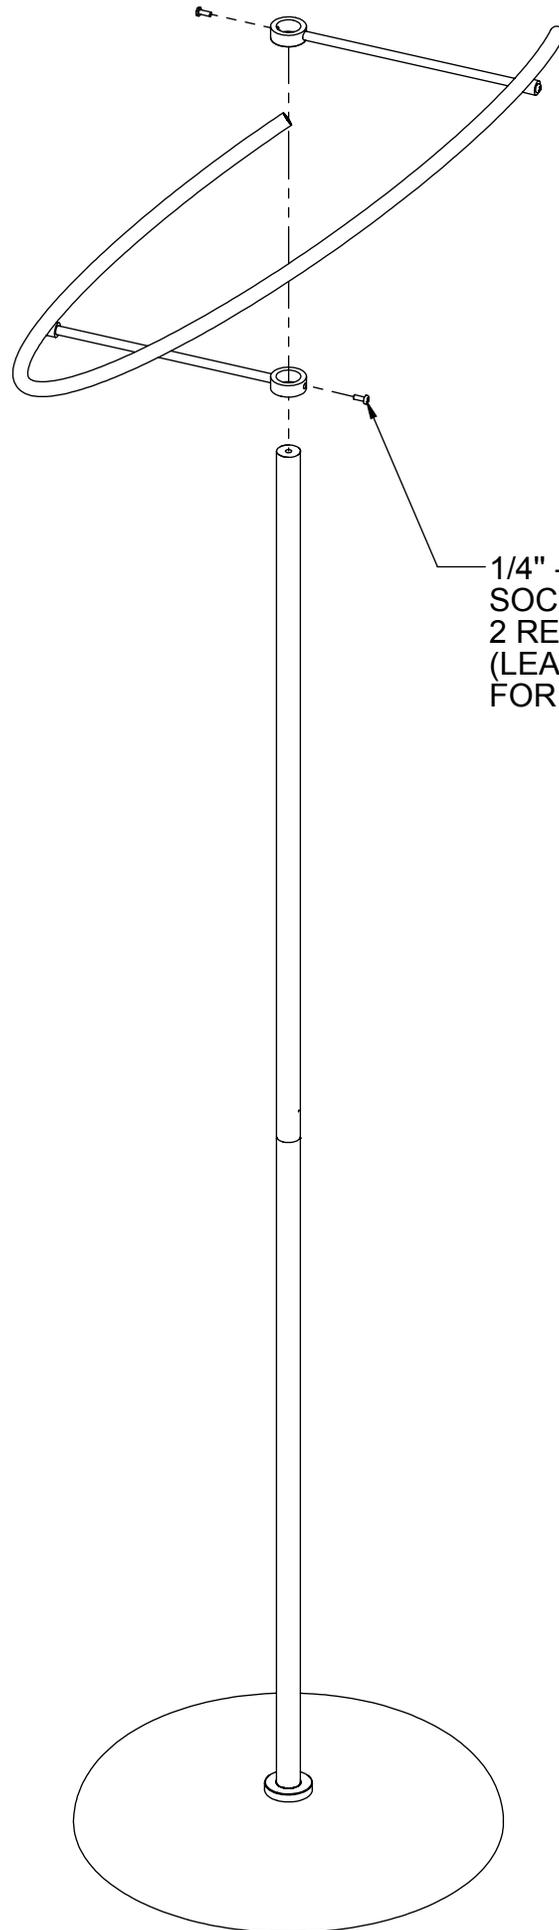

1/4" -20 x 1/4"LONG  
SOCKET HEAD SET SCREW  
2 REQUIRED FOR THIS STEP  
(LEAVE THESE SCREWS LOOSE  
FOR EASE OF ASSEMBLY)

Assembly instructions for  
K29

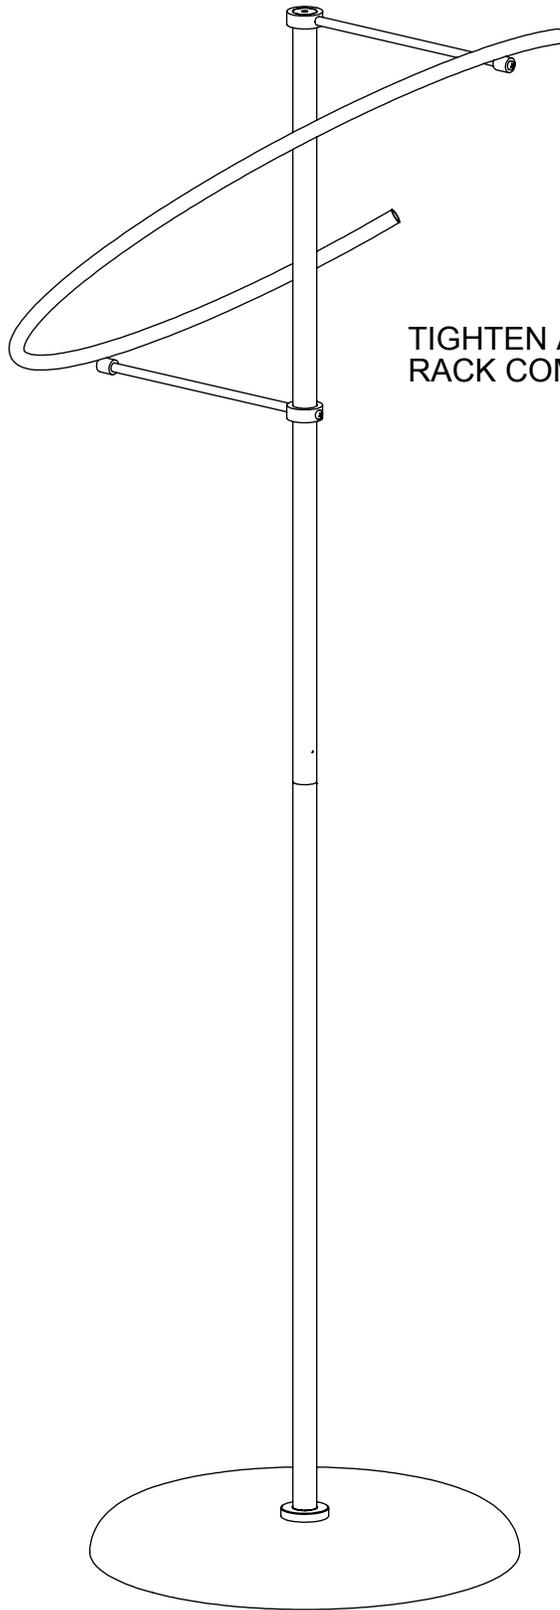

TIGHTEN ALL SCREWS TO FIX  
RACK COMPONENTS INTO PLACE.

Assembly instructions for  
K29